



Performance Tips

BC902-057



Parts Needed:

- 2 Performance Tips
- Stock hardware
- Supplied washers

Fits The Following Motorcycles:

- Triumph Street Twin

Tools Required:

- 10 mm Allen wrench
- 12 mm wrench

Difficulty:

Time Required: 45 minutes

Weekend Project Category:

- Performance



WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and

WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.

Other Items We Think You May Like



Mule Tracker Bar



Off Road Foot Pegs




Vintage Rear Sprocket



ACG Badge

Performance Tips

BC902-057

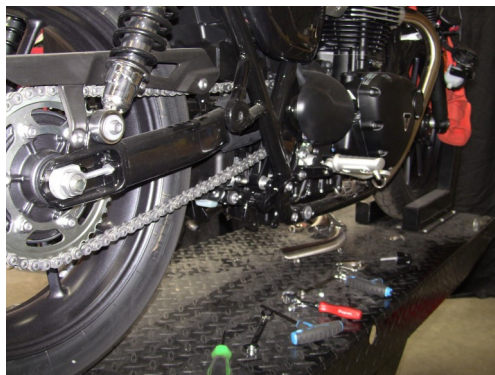

Step 1:

Remove stock exhaust mufflers and heat shields. If you aren't sure how to do this, please refer to our guide covering how to remove your stock exhaust on our site's Resource Center.



Step 2:

To install right Performance Tip, use a 12mm socket wrench to remove bolt along bottom of right foot peg mount.



Step 3:

Place stock gaskets on catalytic converter's right exit pipe. Place clamp over gaskets and use a 10mm socket wrench to loosely tighten the clamp.



Step 4:

Place end of right Performance Tip into catalytic converter.


Performance Tips

BC902-057



Step 5:

Use a 12mm socket wrench to tighten right Performance Tip rear bracket to lower foot peg mount. Be sure to use washer.

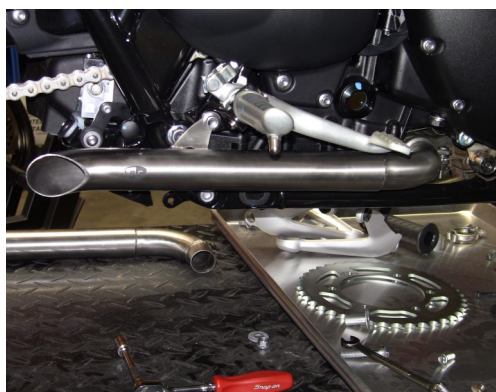


Step 6:

Tighten clamp securing right Performance Tip to catalytic converter.



Step 7:

Reinstall right heat shield. Make sure the latch on the heat shield engages with the hook that will secure it to the motorcycle.

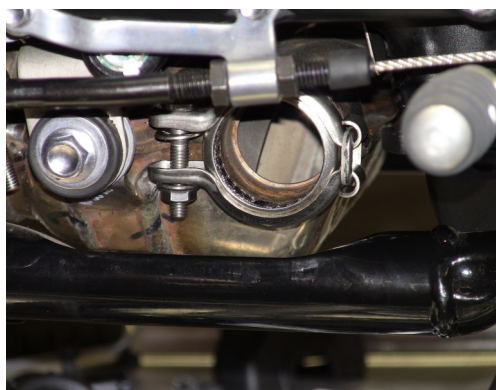

Step 8:

To install left Performance Tip, place stock gaskets on catalytic converter's left exit pipe. Place clamp over gaskets and use a 10mm socket wrench to loosely tighten the clamp.

Performance Tips

BC902-057



Step 9:

Place end of left Performance Tip into catalytic converter.




Step 10:

Use a 12mm socket wrench to tighten left Performance Tip rear bracket to lower foot peg mount. Be sure to use washer.



Step 11:

Tighten clamp securing left Performance Tip to catalytic converter.

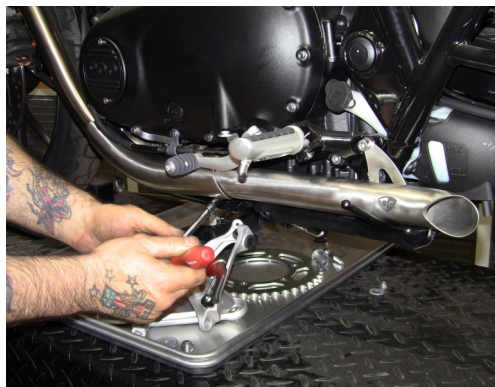

Step 12:

Reinstall left heat shield. Make sure the latch on the heat shield engages with the hook that will secure it to the motorcycle.



BRITISH CUSTOMS

Performance Tips

BC902-057



Installation Complete!

You have successfully installed your Performance Tips! Be sure to wipe them down with an alcohol-soaked rag before turning on your engine, otherwise any fingerprints or grease on the Performance Tips will discolor them.